 


# CANYON Two-Way Radios

Article: CNR-WT3

USER MANUAL v1.0

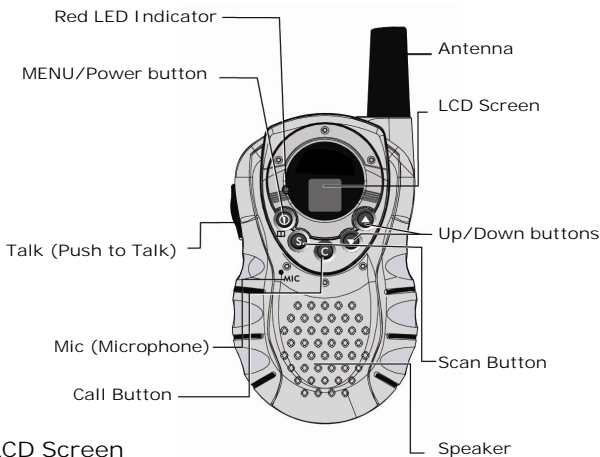

## 1. LCD Screen



**8** Channel Number


**2** Speaker volume level

**TX** Transmitting a signal

**RX** Receiving a signal

**L** Power Low indicator

Insert your fingernail behind the tab

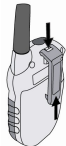

Lift the belt clip off


## 2. Fitting the batteries

Your Walkie-talkie includes a rechargeable battery pack for each handset.


Step 1 To remove the belt clip

Step 2 To fit the batteries


Step 3 To replace the belt clip

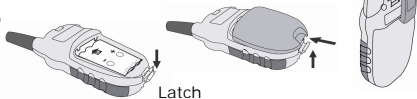

## 2.1 Charging the batteries

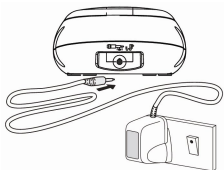

The charge light comes on when a handset is in the cradle

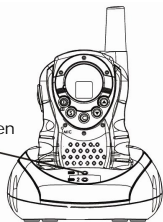

### Battery life

- The walkie-talkie units have a built-in Power Saver (PS) for maximum battery life, but when not in use, turn the unit OFF to conserve battery power.
- Remove the batteries if the units will not be used for a long period of time.

## 3. Operation

### 3.1 Turning the Unit ON/OFF

1. To Turn ON - Press and hold the Power button to turn on.
2. To switch OFF - Press and hold the Power button to turn off.

### 3.2 Adjusting the Speaker volume

To adjust the speaker volume, press the UP button to increase, or press the DOWN button to decrease.

### 3.3 Receiving a Call

When a signal is received on the current channel, the receive signal icon "RX" will be displayed on the LCD Screen.

### 3.4 Transmitting (sending)

1. Press and hold the TALK (Push to Talk) button to transmit your voice.  
The transmit signal icon "TX" will display on the LCD Screen and the RED LED indicator will light.
2. Release the TALK button when you have finished transmitting.

### 3.5 Calling (Paging) Tone

You can use the CALL button to send a tone to other users on the same channel.

### 3.6 Channel Scan

Channel scan performs a search for active signals in a continuous loop from channels 1 to 8. This allows you to find other radios without having to manually change to each channel.

## 3.7 The Menu Functions

### 3.7.1 Changing Channels

The PMR has 8 available channels. To change channel -

1. Press the Menu button once, then press the UP or DOWN button to select the desired channel.
2. Press the TALK button again to confirm your selected channel.

### 3.7.2 TX Power High/Low setting

This feature permits the selection of the transmitting power level to high or low. At Power High, the PMR will transmit at maximum power and at a longer transmission range.

1. Press the Menu button twice.
2. Press the UP or DOWN button to select High or Low.
3. Press the TALK button again to confirm your selected power level.

### 3.7.3 Monitor

You can use the Monitor feature to check for weak signals on the current channel.

1. Press the Menu button 3 times.
2. Press the (Menu) button again to turn off the Monitor operation and return to standby mode.

## 4. Auxiliary Features Channel Frequency Table

### 4.1 Power Saving

When the unit is not used for 6 seconds, it will automatically switch into a low power mode. When a signal is detected, it automatically returns to full power mode.

### 4.2 Low Battery Indicator

An alert tone will be heard and the RED LED indicator will flash once every 15 seconds. Replace the batteries when battery low.

\* Please refer to English Manual for more details.