



4 Port Cable/DSL Broadband Router


Article: CNP-BR1

Quick Guide v1.0

Package Contents

1. **CANYON CNP-BR1** Main Unit
2. Power Adapter
3. Documentation CD
4. Quick Guide
5. Warranty Card

Hardware Overview

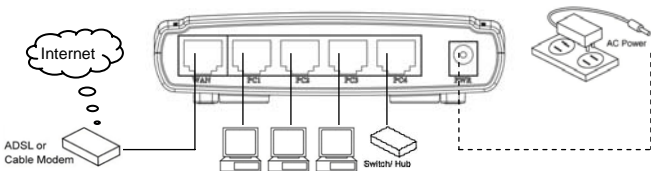

Getting Started

Connecting to Device

1. Make sure that all network devices are powered off, including the device itself, PCs, switches, cable or DSL modem, and other peripherals.
2. Connect the modem to WAN port of the device by one CAT 5 Ethernet cable.
3. Connect PC(s) with the LAN ports (PC1/PC2/PC3/PC4) of the device by CAT 5 Ethernet cables. One PC connects to only one port using one cable.
4. Power on the cable or DSL modem.
5. Plug in the power of the device. The Power status indicator at the front panel of device will light up as soon as the power adapter is connected properly.
6. Power on PC(s).

Internet Configuration Wizard

The default network address of the device is set as 192.168.1.1. Please configure IP address of host PC at 192.168.1.XXX where XXX is a number between 002 and 254. The subnet mask should be 255.255.255.0. Please follow below steps to enter web browser management mode.

1. Open a browser (**Internet Explorer browser only**) and type in "192.168.1.1" at the address bar and press Enter.
2. Type "guest" at the user name text box and "guest" again at the password text box.
3. The home page of web browser management mode will be displayed.
4. Click on 8 different functions on the main router menu on the left. The corresponding information will be displayed at right.
5. Click on Help at any time to bring up help menu.

1. Start Internet Configuration Wizard

Internet Configuration Wizard

Start Internet Configuration Wizard

Internet Configuration Wizard will help you to setup internet connection easily.

pop up don't pop up

- Internet Configuration Wizard will pop up upon successful login.

NOTE:

Enable active X control option if necessary or click on **Wizard** to start.

- Select **pop up** to enable automatic Internet Configuration Wizard prompt window. Click on **Save** to save this setting.
- Click on **Start** to continue.
- Click on **Exit** to exit.

2. Select Connection Type

Internet Configuration Wizard		
Connection Type	Select Connection Type	
<input type="radio"/> DHCP	Select one of the connection types, and click the "Next" button. If you don't know about the connection type, please tell your network administrator or ISP	
<input type="radio"/> PPPoE		
<input checked="" type="radio"/> Static IP		
<input type="radio"/> PPTP		
<input type="button" value="Prev"/>	<input type="button" value="Next"/>	<input type="button" value="Exit"/>

- Select 1 of 4 connection types instructed by ISP or network admin.
- Click on **Next** to continue or **Prev** to go back to previous page.
- Click on **Exit** to exit.

2.1 DHCP Connection

Internet Configuration Wizard		
HostName, Domain Name and Physical Address	Set Physical address	
Host name <input type="text" value="TransData"/>	If your ISP check the Physical address, Physical address should be set.	
Domain Name <input type="text" value="RouterDoMain"/>		
<input type="checkbox"/> Clone Physical address If checked, the Physical address of PC will be updated		
<input type="text" value="08-10-74-2D-13-7D"/>		
<input type="button" value="Prev"/>	<input type="button" value="Next"/>	<input type="button" value="Exit"/>

- Type in **Host Name** and **Domain Name** provided from ISP or network administrator.
- Check on **Clone Physical Address** or enter physical address manually if required by ISP.
- Click on **Next** to continue or **Prev** to go back to previous page.
- Click on **Exit** to exit.

2.2 PPPoE Connection

Internet Configuration Wizard		
PPPoE Account & Password	Set PPPoE Account & Password	
PPPoE Account	12345678@aol.com	
PPPoE Password	●●●●●●●●	
	Set PPPoE account & password which are supplied from your ISP	
<input type="button" value="Prev"/>	<input type="button" value="Next"/>	<input type="button" value="Exit"/>

- Type in **PPPoE Account** and **PPPoE Password** provided from ISP.
- Click on **Next** to continue or **Prev** to go back to previous page.
- Click on **Exit** to exit.

2.3 Static IP Connection

Internet Configuration Wizard		
Static IP	Set Static IP	
IP Address	118.166.69.170	
Subnet Mask	255.255.255.255	
Gateway	118.166.69.170	
Primary DNS	0.0.0.0	
Secondary DNS	0.0.0.0	
	Fill the blank input box with the values which are supplied from your ISP	
<input type="button" value="Prev"/>	<input type="button" value="Next"/>	<input type="button" value="Exit"/>

- Type in **IP Address**, **Subnet Mask**, **Gateway**, **Primary DNS**, and **Secondary DNS** provided from ISP.
- Click on **Next** to continue or **Prev** to go back to previous page.
- Click on **Exit** to exit.

2.4 PPTP Connection

Internet Configuration Wizard

PPTP

User Name

Password

Server IP Address

DHCP Static IP

Set User Name & Password
Set PPTP User Name & password which are supplied from your ISP

- Type in **User Name**, **Password**, and **Server IP Address** provided from ISP.
- Select IP assignment method as instructed by ISP.
- Click on **Next** to continue or **Prev** to go back to previous page.
- Click on **Exit** to exit.

3. Installation Completed

Internet Configuration Wizard

Finished
All configurations are applied and saved
Press "exit" button

- Click on **Exit** to finish Internet Configuration Wizard.

Please refer to full manual on CD for more detailed operation information.